

ACCESSORIES - ZUBEHÖR

Adapter

Order No	Connection / Anschlüsse			
Bestell Nr.	Male Ausengewinde	Female Innengewinde		
TDR 10x90	BSP 1/8"	BSP 1/8"		
TDR 13x90	BSP 1/4"	BSP 1/4"		
TDR 17x90	BSP 3/8"	BSP 3/8"		
TDR 21x90	BSP 1/2"	BSP 1/2"		
TDR 26x90	BSP 3/4"	BSP 3/4"		
TDR 33x90	BSP 1"	BSP 1"		
TDR 42x90	BSP 1-1/4"	BSP 1-1/4"		
TDR 48x90	BSP 1-1/2"	BSP 1-1/2"		
TDR 60x90	BSP 2"	BSP 2"		

Order No	Connection / Anschlüsse			
Bestellnr.	Male Ausengewinde	Female Innengewinde		
TDR 10x45	BSP 1/8"	BSP 1/8"		
TDR 13x45	BSP 1/4"	BSP 1/4"		
TDR 17x45	BSP 3/8"	BSP 3/8"		
TDR 21x45	BSP 1/2"	BSP 1/2"		
TDR 26x45	BSP 3/4"	BSP 3/4"		
TDR 33x45	BSP 1"	BSP 1"		
TDR 42x45	BSP 1-1/4"	BSP 1-1/4"		
TDR 48x45	BSP 1-1/2"	BSP 1-1/2"		
TDR 60x45	BSP 2"	BSP 2"		








Female - Male thread adaters (90°)

 $90^{\rm o}{\rm Aussengewinde}$ und Innengewinde Spitzenadapter

Material: MS 58 Brass - Messing

Order No Bestell Nr.	Ød	Ød1	L	L1	L2	#
TKDZ 10x13	BSP 1/8"	BSP 1/4"	25	17	9	15
TKDZ 13x17	BSP 1/4"	BSP 3/8"	27.5	19	9	20
TKDZ 21x17	BSP 1/2"	BSP 3/8"	35	25	15	25

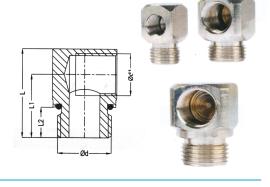

Male - hose adaters (90°)

Order No Bestell Nr.	Ød		Ød1	Ød2	L	L1	Hex.
BB 10x09 HT-2	90 BS	P 1/8"	9	6	27	20	15
BB 13x13 HT-2	90 BS	P 1/4"	13	9	34	24	17
BB 21x19 HT-2	90 BS	P 1/2"	13	13	47	32	24
BB 0875 - 19 H	T-290	M8x0.7	5 9	4.5	27	20	15
BB 1010 - 19 H	T-290	M1Ox1	9	9	27	20	15
BB 1415 - 19 H	T-290	M14x1.	5 13	9	34	24	17
BB 1415 - 19 H	T-290	M24x1.	5 19	13	47	32	24

